


VRCP-65 Software upgrade

1. Decompress the file to obtain the VRCP-65 software file "ISPBOOT.BIN".
2. Copy the file "ISPBOOT.BIN" in the root directory of USB.
3. Connect the Power and switch ON the VRCP-65
4. Plug the USB driver to the USB socket of the VRCP-65
5. The eject button at the Top right corner and the Reset button is in the hole adjacent the eject button. Press and hold the "eject" button and then use a pin/clip to press the reset button once to upgrade the SOC software

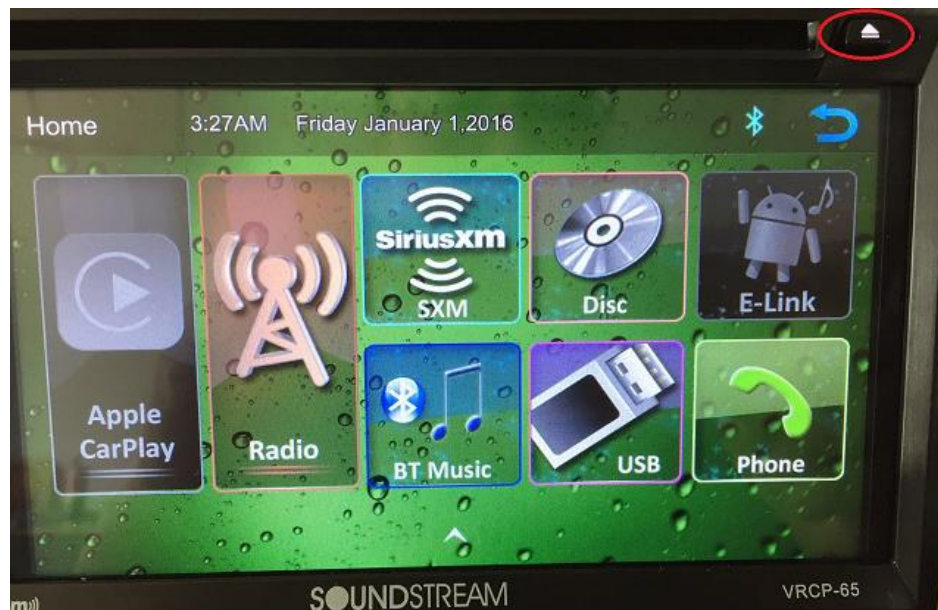

6. Below screen will be shown mean the software upgrade is processing, the processing bar is shown the progress.



7. When finish the SOC software upgrade, the processing bar will be disappear



8. Switch OFF and then ON the power or press the reset button to restart the unit.