


# VRCPAA-70M Software Update

1. Prepare a UDISK and format the UDISK into a file system in fat32 format:

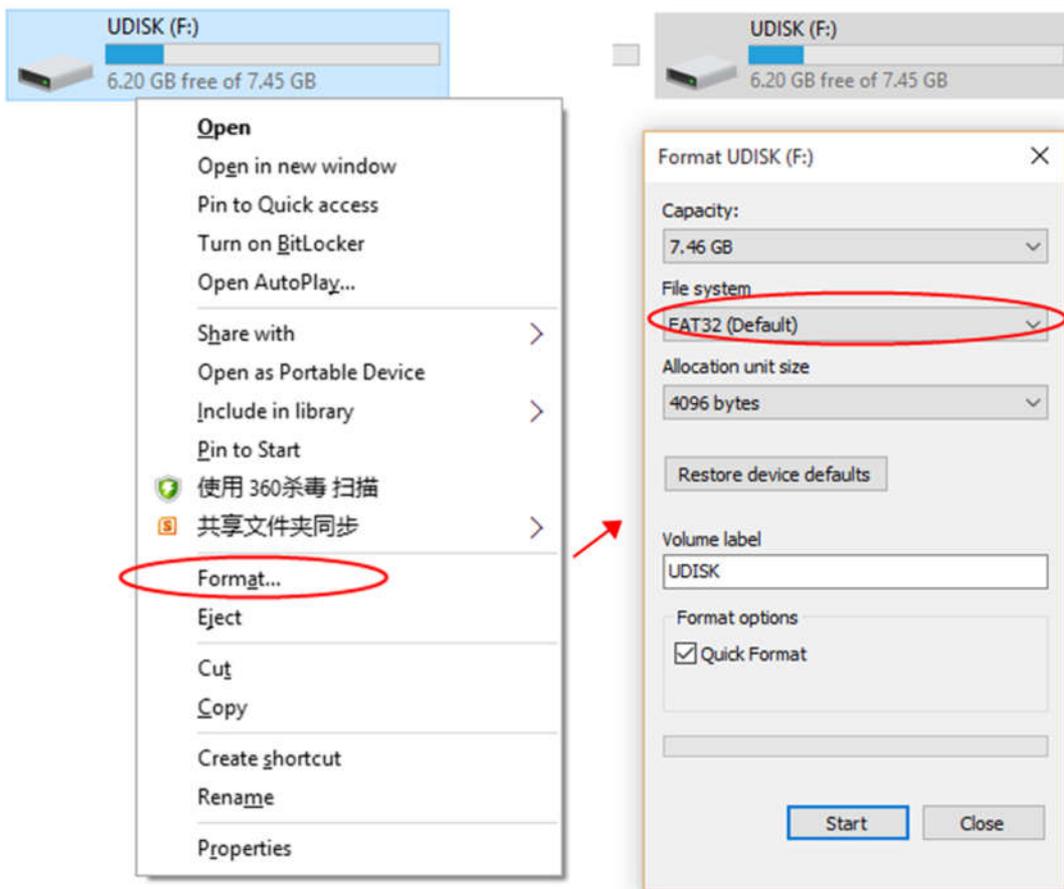




2. Make sure that there are files that need to be upgraded in the root directory of the USB device:



System:ISPBOOOT.BIN

MCU:Update\_mcu.bin

3. Insert the U disk and enter the setting interface from the setting icon of the main interface:

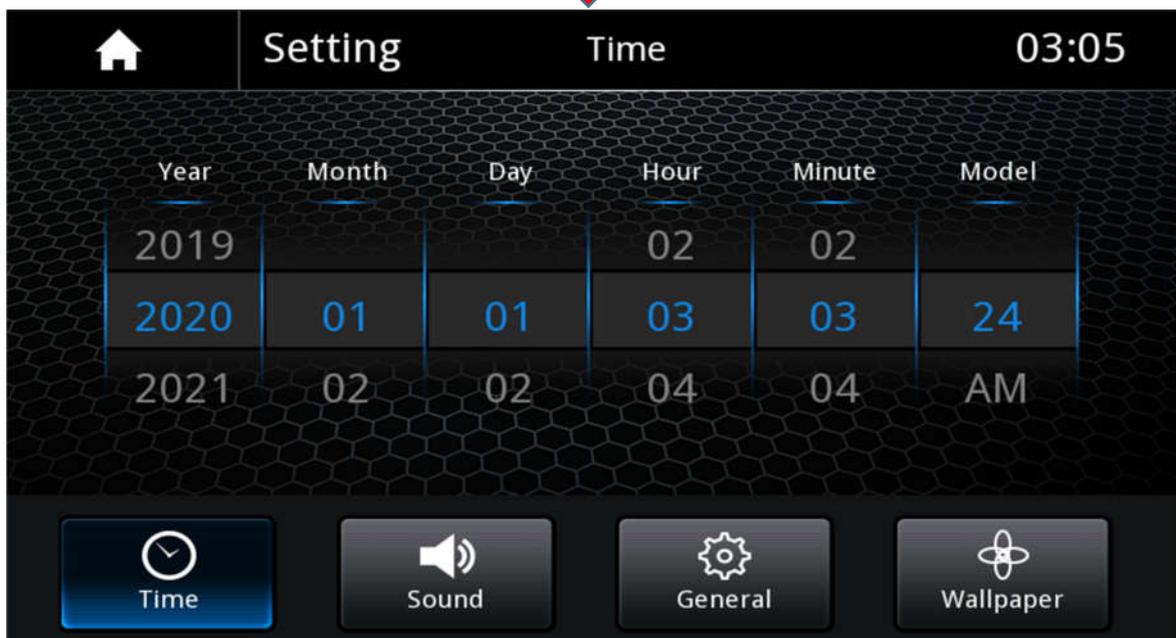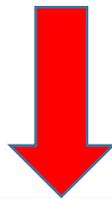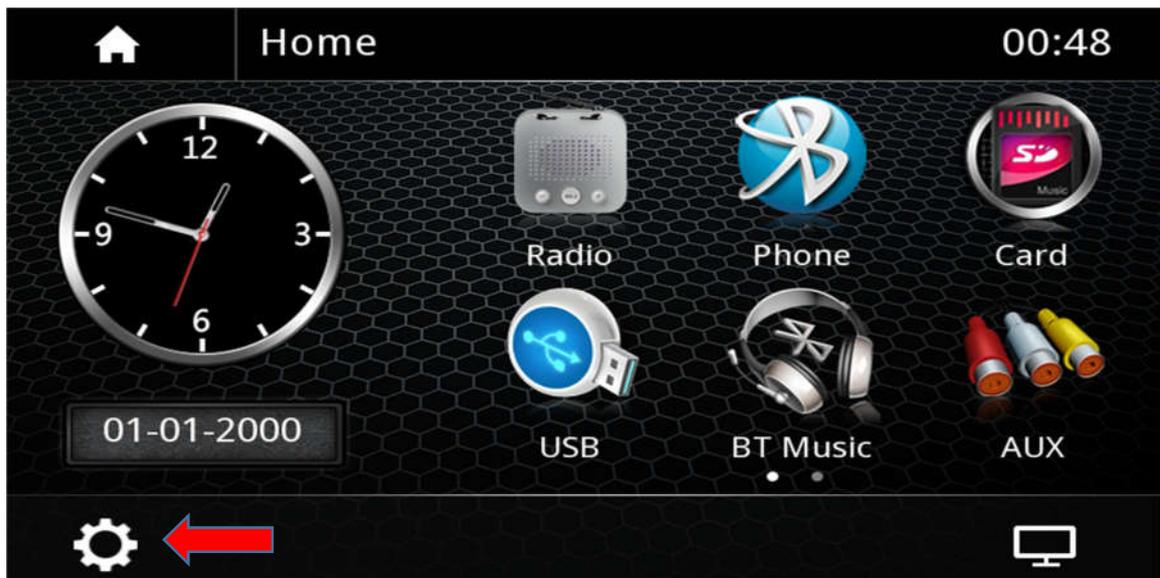


4. Click general to enter:



5. Click serial & version to enter:



6. Click system update to enter:

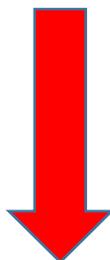



7. Select according to the content to be upgraded:

(1) System:ARM . (2)MCU:MCU . (3) System + MCU :ARM +MCU.






8. If you don't want to upgrade, you can click quit to exit the upgrade interface:

9. Click Update to enter the corresponding upgrade interface:


10. MCU Upgrading:



11. MCU upgrade completed:

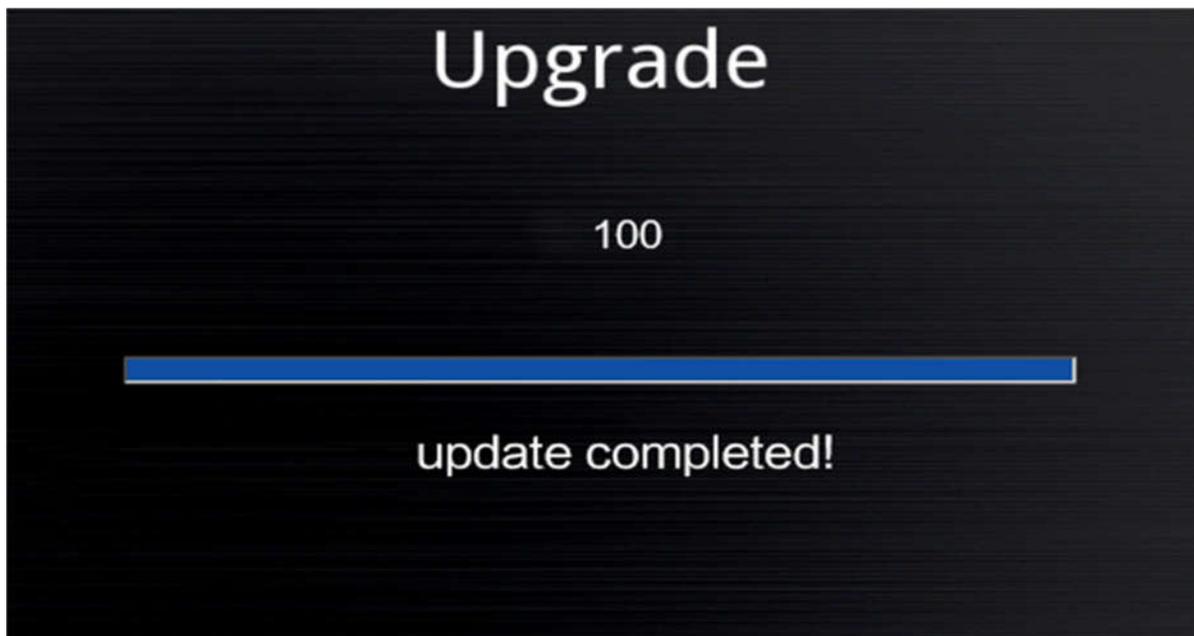

## 12. ARM upgrading:

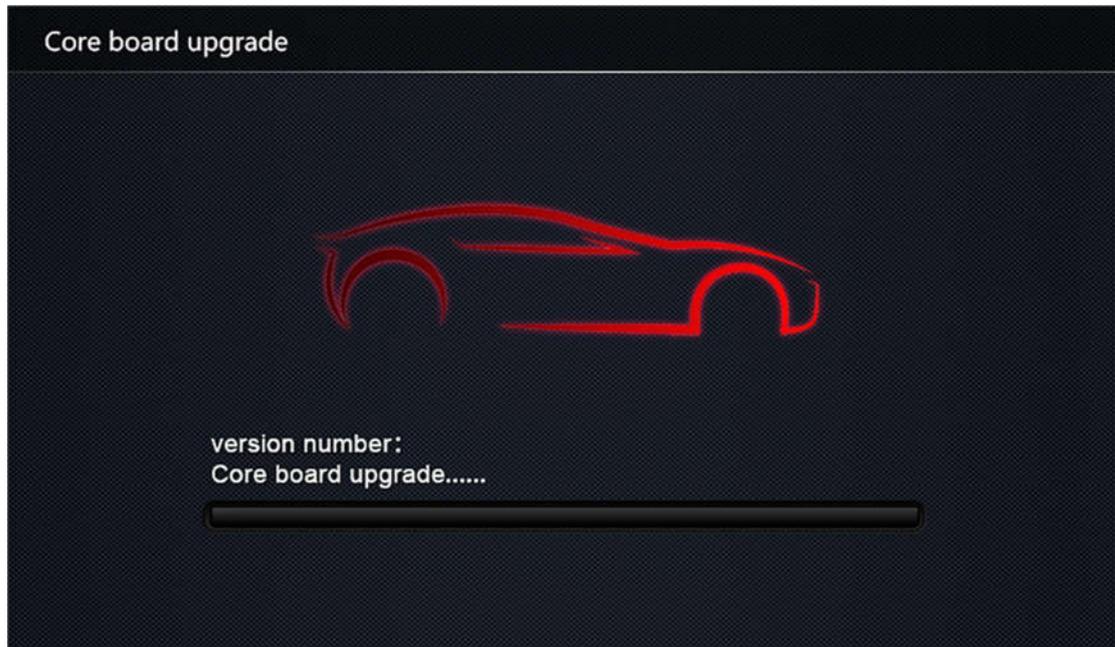

## 13. MCU upgrade completed:

