

### 


# IR Wireless Stereo Headphone USER' S MANUAL

## Installing batteries into the Headphone

- · Lift the battery compartment cover(2) located on the earpiece.
- Insert 2 AAA alkaline batteries (not included) according to polarity
- · Close the battery compartment cover(2).

## Using the Headphone

- 1.Push power switch on the Headphone(例).The red power indicator(例) illuminates.
- 2.Turn volume control knob to adjust the volume(⑥).Do not cover the infrared light sensor(ⓒ③) while adjusting the volume.
- Auto mute eliminates static when IR signal is blocked or you are out of transmitting range.

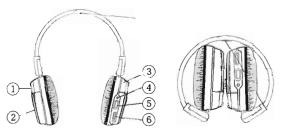

- (1) (3)infrared light sensor
- (2) battery compartment cover
- (4) power indicator
- (5) power switch
- (6) volume control knob

#### NOTE

The unit uses infrared rays to transmit the audio signal. If the headphone is placed too far from the transmitter, a hissing noise may occur. This is characteristic of infrared system and does not mean that system is defective.

#### Special Features:

- 1. The headphone has auto mute function:
  - When the IR transmitter turns off or the headphone does not receive the IR signal, the headphone automatically turns off its power amplifier and mutes
- 2. The headphone has auto power off function:

After 3-5 minutes, if the headphone does not receive the IR signal, it will automatically turn off.

# Cleaning the Headphones

Remove dust or stains with a damp cloth only. Do not use alcohol. henzene or thinner

#### CAUTION

Listening at high volume levels can lead to permanent hearing damage.

#### WARNING

Do not try to disassemble headphone.

Do not place headphone near heat sources or in direct sunlight.

Do not place on very cold surfaces.

Do not place headphones where there is moisturerain, rain, vibration, shock or excessive dust environment.

Do not store in an unstable location or in a magnetic zone. Keep and operate Headphone in a well-ventilated environment.

Do not use oil or grease any mechanical parts. All moving parts require no lubrication

If any liquid should accidentally fall on or get into the product, immediately switch off power.

Turn power off the headphone when it is not in use for a long time.

# Specification

System: Infrared light

Carrier frequency: L channel 2.3MHz

R channel 2.8MHz

FΜ Modulation:

Stereo Mode: >=60dB S/N. Channel separation: >=40dB < 1%

Distortion-

Frequency response: 30-20,000Hz 2×R3 (AAA)

Current consumpation: approx. 25mA max (play)

Approx. 15mA (mute)

Weight: approx. 5,64oz (battery is not included)