 


Instruction Manual

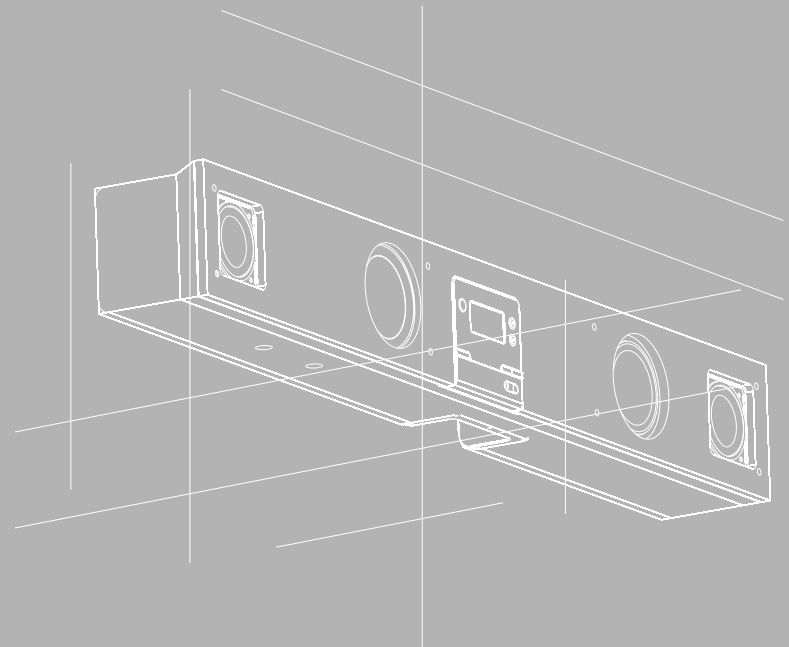

MODEL:H-320BAR

The Ultimate Digital Surround Sound System



H-320BAR

SOUNDSTREAM strives to constantly improve our products, all specifications may change without notice.

Safety Information:

- ▲ **WARNING:** To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- ▲ **WARNING:** The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on the apparatus. As with any electronic product, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.



The lightning flash with arrowhead symbol, within an equilateral triangle, alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

♪ *Note: The product label lies the bottom of product.*

- ▲ **WARNING:** No naked flame sources, such as lighted candles, should be placed on the apparatus.

♪ *Note: This product is intended to be used only with the power supply provided.*

♪ *Note: Where the main plug is used as the disconnect device, such disconnect device shall remain readily operable.*

♪ *Note: This product must be used indoors. It is neither designed or tested for use outdoors, in recreation vehicles, or on boats.*

Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

1. Read these instructions for all components before using this product.
2. Keep these instructions for future reference.
3. Heed all warnings on the product and in the owner's guide.
4. Follow all instructions.
5. Do not use this apparatus near water or moisture. Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. Clean only with a dry cloth, unplug this product from the wall outlet before cleaning.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time to prevent damage to this product.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call F&B to be referred to an authorized service center near you.'
14. To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
15. Do not let objects or liquids enter the product as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
16. See product enclosure for safety related markings.
17. Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.



1. Key Features

Congratulations on your choice of the SoundBar A3501 digital speaker system from SOUNDSTREAM. Designed specifically to work with your flat panel TV, this system provides high-quality audio performance.

 
- Easily change the audio input mode from TV , PC, DVD ,MP3.
- a credit card-sized remote to control system volume and basic functions from almost anywhere in the room
- MAXX STEREO creates a completely immersible surround experience, as if there were dozens of speakers all around you.
- Easy to install and setup thanks to a simple all-in-one design

Unpacking and setting up

Check the carton for all of the parts shown . Save the carton for possible future use. It provides the best means to repack the system for transporting it outside your residence.

2. Sketch map

1. What's included in the carton

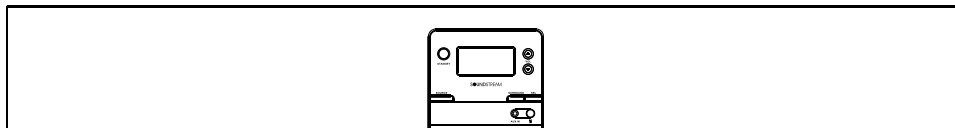


3.5mm(Audio cable)




Audio cable(2RCA) x 1



 Manual




Pothookx 2

 

Remote control




2. System Connection Diagram

 Place the system on a firm and level surface. Its speaker drivers are shielded, which limits the possibility of video interference if it is placed near a computer or video screen.

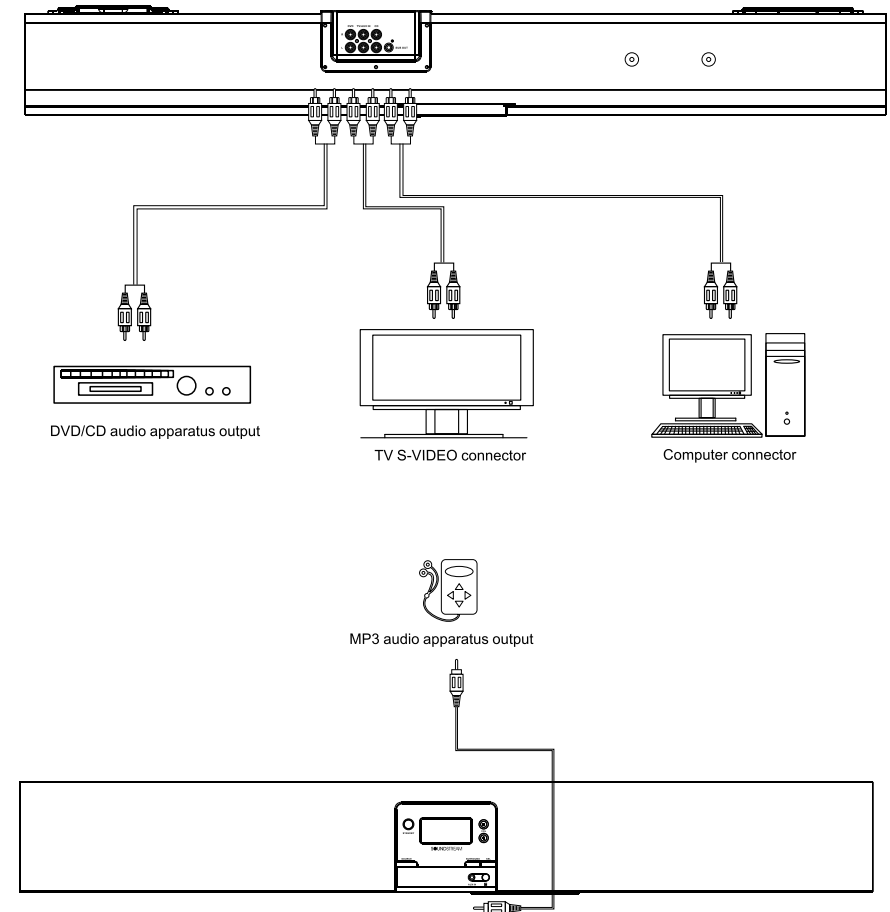


3. Function key of product and how to connect

   
- 1) Stand By Button
- 2) Multi purpose display
- 3) Volume up Button
- 4) Volume down Button
- 5) SEL Button: Exchange the mode: Treble ,Bass , Surround
- 6) Source Button: Music source select among DVD/CD ,TV , PC
- 7) Surround Button: Surround mode select
- 8) AUX IN : 3.5mm stereo AUX in jack
- 9) Remote signal receiver
- 10) DVD signal in jack
- 11) TV/AUX IN signal in jack
- 12) PC audio signal in jack
- 13) Subwoofer out
- 14) Power cable plug in jack
- 15) Wall mount bracket

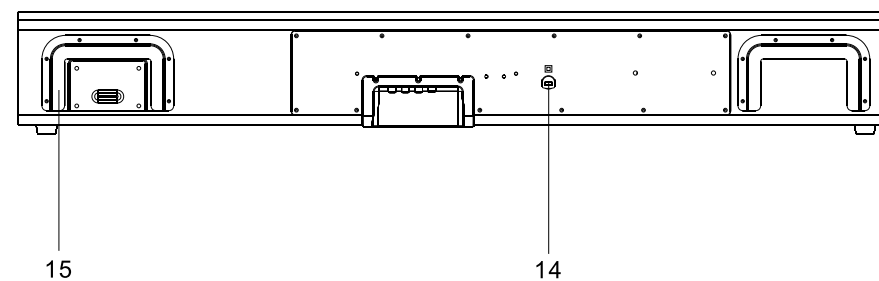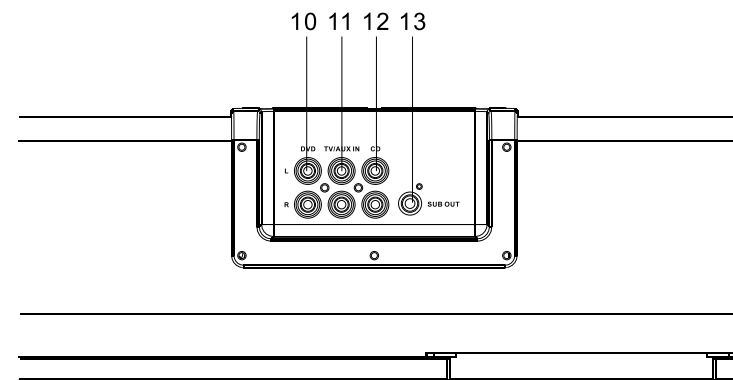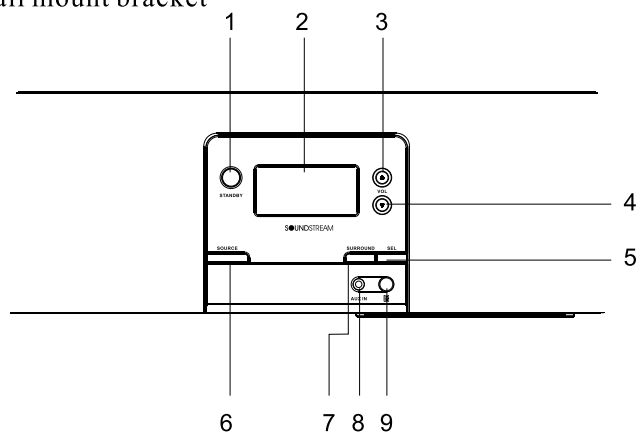

 
4. Display state sketch map

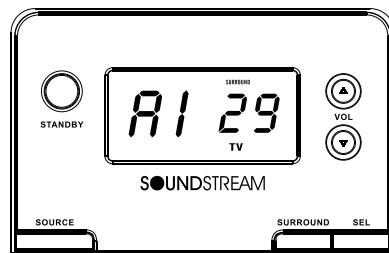


TV/AUX IN state

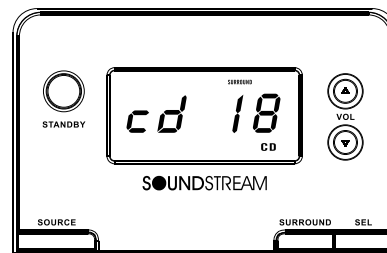 

CD state

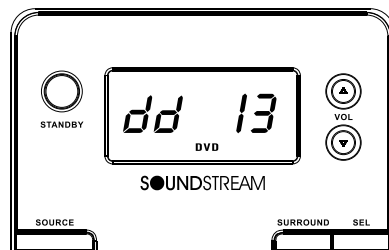 


DVD state

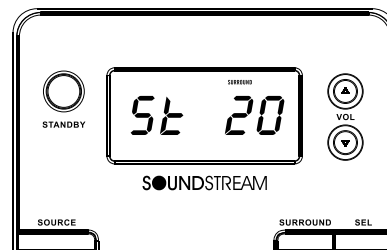 

SURROUND state

5. Function key of Remote control

 - 1) Stand by button
- 2) Mute button
- 3) Select input DVD audio signal
- 4) Select input CD audio signal
- 5) Select input TV audio signal
- 6) Surround Mode select
- 7) Stereo By pass
- 8) Treble volume down
- 9) Treble volume up
- 10) Bass volume down
- 11) Bass volume up
- 12) Surround effect down
- 13) Surround effect up
- 14) Master volume down
- 15) Master volume up

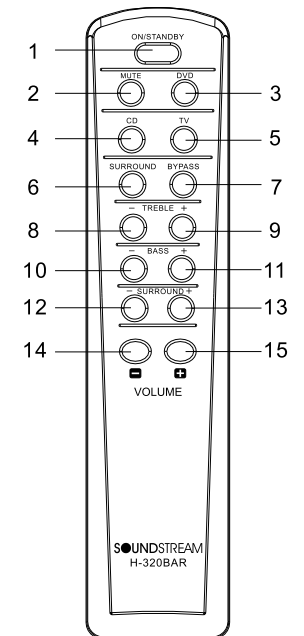

6. Remote control operation instruction

Your system is ready to go as soon as you plug it in, turn it on . Simply press the Stand-By button to active your system.

1. SOURCE CONTROL

The system has 4 audio input mode:

A:CD in B: PC in C: TV in D: AUX in

The default mode is set to CD in. Press the Source Select button to select the audio signal input source among them.

When 3.5mm connector plug in AUX jack, the Input Mode automatically change to AUX Mode.It will be back to the original mode when you plug AUX out. .

2. SOUND CONTROL

Press the button Volume Up/Down to adjust the system volume.

3. SURROUND CONTROL

Press Surround button, you can enjoy the virtual surround experience from the system. Then press Stereo button, you can adjust the surround sound field effect

Press By-Pass button, it is back to bypass mode, surround effect off.

4. PLAYING CONTROL

1, In DVD mode , the text " DD" is shown on the display screen. You can adjust volume ,tone ,surround effect etc.

2, In CD mode , the text " CD"is shown on the display screen. You can adjust volume ,tone ,surround effect etc.

 
3, In TV mode , the text " TV" is shown on the display screen. You can adjust volume ,tone ,surround effect etc.

7.Maintaining the system

Changing the remote control battery is the only regular maintenance that is required. You may also clean the system as needed.

Battery replacement

- Replace the remote control battery when it stops operating (normally every year or two), or its range seems reduced.
- Keep in mind that lighting and other room conditions, in addition to battery age, can affect the operating range of an infrared remote control.

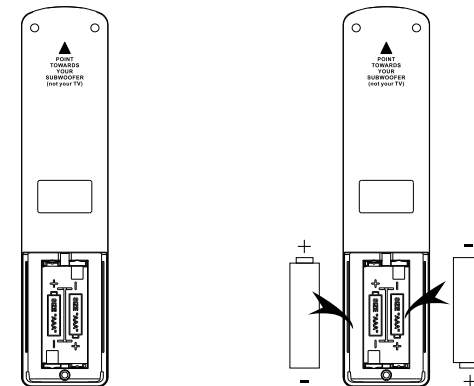

To clean the system

Wipe the system using a soft dry cloth. You can also lightly vacuum the grille.

- Do not use solvents, chemicals, or sprays.
- Do not allow liquids to spill or objects to drop into any openings.

8. Troubleshooting

Problem	What to do
No sound	<ul style="list-style-type: none"> • Make sure the system is plugged in, Press the Play/Pause button on the remote control. • Make sure your music source is turned on, and a music track is selected and playing. • Increase the volume setting for the system.
No display wall outlet	<ul style="list-style-type: none"> • Make sure the power cable is securely plugged into a functioning
Sound too low	<ul style="list-style-type: none"> • Increase the volume setting for the system • Increase the volume setting for the music source
Your system does not respond to its remote commands:	<ul style="list-style-type: none"> • Unplug the power cable for 1 minute, then plug it back in. This resets the system. • Contact F&B Customer Service about the problem.

9. Technical Information

Power rating:	120V/60Hz
Input Sensitivity:	Woofer: 280mv mid-High :550mv
S/N:	≥55dB
Frequency Response:	68Hz-20kHz
Power(RMS):	Woofer: 20W Mid-High: 2 x 10w
Net Weight :	6.5kg
System size and weight:	L 930 x H 122 x D119 mm