INSTRUCTIONS

SOUNDSTREAM



VM-622HB 6.2INCH SCREEN AUDIO & VIDEO PLAYER

Car Multi-media System



Contents

1. Notes On Installation	1
2. Wiring Diagram	1
3. Remote Control Description	2
4. Control Panel Buttons	3
5. Main Menu	4
6. Radio	5
7. USB/SD Music Operation	6
8. SD/USB Picture Play	7
9. SD/USB Video Play	7
10. Bluetooth Operation	8
11. AV IN	10
12. Phone link	11
13. Wallpaper Function	12
14. System Setting	12
15. Audio Setting	12
16. Display Setting	12
17. Bluetooth setting.	13
18. Date And Time Setting	13
19. Steering Wheel Learning	14
20. Multimedia Image Proportion Setting	14
21. Keypress Light Color Setting	15
22. Factory Setting	15
23. System Software Version	16
24. Audio/Video Support Format List	17

1. Notes On Installation

The unit is designed for 12V DC negative ground operation system only. Before installing the unit, make sure your vehicle is connected to DC12V negative ground electrical system.

The negative battery terminal must be disconnected before making connections, which can decrease the chance of damaging the unit due to short circuit.


Be sure to connect the color coded leades correctly according to the diagram. Incorrect connection may cause the unit malfunction or damage the vehicle s electrical system.

Be sure to connect the speaker (-) leads to the speaker (-) terminal. Do not connect the left and right channel speaker cables to each other or to the vehicle body.

Do not block vent or radiator panel. Blocking them will cause heat build up inside and may result in fire.

After the completion of the installation and begin to play the unit (including replacing the battery), please press the RESET button on the front panel with pointed objects (such as ball-point pen) to set the unit to initial status.

2. Wiring Diagram

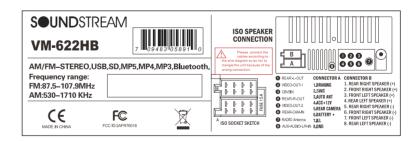

1

3. Remote Control Description

Basic Operations

Installing the lithium coin battery (CR2025)

- Aim the remote control directly at the remote sensor on the unit
- DO NOT expose the remote sensor to strong light (direct sunlight or artificial light)

WARNING: To prevent accidents and damage

- DO NOT install any battery other than CR2025 or its equivalent
- Store the battery in a safe palce where children cannot reach
- DO NOT charge, decompose, heat up the battery or dispose it in a fire.
- DO NOT poke or pierce the battery with tweezers or similar tools.
- Wrap the battery with tape for insulation when throwing it away for keeping it for future use.
- 1. ⊍Power switch 11. ▶ Left
- 2. Mute 12. Confirm / Play / Pause
- 3. ▲Up 13. ► Next tracking
- 4. Menu 14. ▼ Under the
- 5. Mode switch 15. Volume -
- 6. **⋖** Right 16. SEL
- 7. USB / SD 17. Answer the phone
- 8. **◄** Previous tracking 18. Hang up
- 9. Band/AMS 19. Digital key
- 10. Volume +

4. Control Panel Buttons



- 1) Power/Mute Switch
 - In power off model, press and hold for 2 seconds to turn on the unit.

 Press it briefly to toggle mute on or off.
- Volume Decreasepress to decrease the volume.
- Main Menu
 Press this button to go into the home page.
- Volume Increase(+)
 Press to increase the volume.
- Mode
 Press to go into USB/SD/BT/AUX/Radio model.
- 6) Reset
- 7) USB port
 - USB port for media playback: This USB port is designed for media playback flash memory devices. If you would like to play mp4/mp3/WMA/JPEG/files in a USB flash memory device, insert the USB flash memory into the USB port on the back of the unit.
 - USB port for USB charger: This USB port is designed for charging for iphone/android mobile phone. The charging current consumption is 2 ampere.
- 8) SD slot.
- 9) Micphone.

5. Main Menu

This product has Radio, USB, Bluetooth, AUX In, Camera entertainment system.

Press each function to enter relevant operation.

• In each mode, press at to enter into main menu.



Detail operation as below:

- a) Volume adjustment.
- c) Radio Function
- d) USB Function; If click this icon when no USB, I will display "NO USB"
- e) SD Function; If click this icon when no USB, I will display "NO SD"
- f) Bluetooth function.
- g)

 Bluetooth music shortcut icon.
- h) External audio/video input icon.
- i) Mirrorlink function(only support android mobile).
- j) Wallpaper setting with 10 different wallpapers.
- k) System setting.
- Audio setting.
- m) Display setting.
- n) Bluetooth setting.
- o) Date and time setting.
- p) Steering wheel button learning.

- q) Multimedia picture proportion setting.
- r) Button light color setting.
- s) Factory setting.
- t) System version.

6. Radio

Click the icon in main menu to enter radio function



Detail operation as below:

- a) Press at to enter main screen.
- b) Press X to adjust volume.
- c) Turn off the screen.
- d) 187.50 2 90.10 3 98.10 4 106.10 5 107.90 6 87.50 m P1-P6 click to select Radio station, after pressing scan button, long press to save the radio station that you like.
- e) Press di it will change to low frequency radio stations automatically.
- f) Press 📂 it will change to high frequency radio stations automatically.
- g) FM1 Band switching FM1/FM2/FM3 AM1/AM2.
- h) radio graduation and indicator, move it to the channel that you want.
- i) Press to slightly adjust to low frequency.
- j) Press > to slightly adjust to high frequency.
- k) Press 🖒 to scan and save radio station automatically.
- 1) Press Q to browse radio stations.
- m) Stereo switch LSTm stereo and "MONO" channel for selection.
- n) Close and remote radio reception with "DX"(Close) and "LOC" (remote) for choice.

7. USB/SD music operation

• Press for music playing(support MP3/WMA...format).





Detail operation as below:

- a) Press to enter music playing list.
- b) short press to shift to previous song, FR 2/4/8/16 long press for fast backward.
- c) short press to shift to next song, FF 2/4/8/16 long press for fast forward.
- d) Pause/Play.
- e) Repeat Play: Single circulation, Repeat contents, All repeat.
- f) Shuffle play.
- g) Channel selection (left vocal tract, right vocal tract, stereophonic).
- h) Press to stop and return back to music list.

8. SD/USB Picture play

• Press to enter music playing. Under music playing status, press to enter folder, press to image list and select to play the image.





Detail operation as below:

- a) Press lito enter image list.
- b) Press to shift to previous image.
- c) Press to shift to next image.
- d) Pause/Play.
- e) English Repeat Play, with choice single circulation, repeat contents, repeat all.
- f) Shuffle play.
- g) Enlarge/Reduce image.

9. SD/USB video play

Press to enter music playing. Under music playing status, press to enter folder, press to video list and select to play.







Detail operation as below:

- a) Press o enter video list.
- b) Press short press to shift to previous, long press, long press for fast backward FR 2/ 4/ 8/ 16.
- c) short press to shift to next song, long press for fast forward FF 2/ 4/ 8/ 16.
- d) 📶 ause/Play.
- e) top and return back to video list.
- f) Repeat Play with choice single circulation, repeat contents, repeat all.
- g) Shuffle play.
- h) Enlarge/Reduce.
- i) Channel selection (left vocal tract, right vocal tract, stereophonic).
- j) SLow Slow play(off slow play, slow play times 1/2/3/4/5).
- k) Subtitle.
- keyboard for selecting.

10. Bluetooth operation

• Press or in main menu to enter BT mode.



Detail operation as below:

(1) Bluetooth call, press number 0 9 to dial the phone number, click to call and click to delete wrong number.



(2) Bluetooth phone call record.



- a) Incoming calls.
- b) 💟 Calls.
- c) Missed calls.
- d) Download phone call records.
- (3) Bluetooth phone book; press to download phone book, click the phone number to make phone call, press to page up and down, press the right icon for contact first name searching.



(4) Bluetooth music; press to shift to previous song, press to pause/play, press to shift to next song.



(5) When connecting bluetooth with device, display below. When no connection, it will display to device connection



11. AV IN

- Press to enter the external audio and video function.
- Front & rear side AUX for external audio input only. If want video display, then external video input to back side CBVS IN



12. Phone link

- Press to enter mirrorlink function(only support android system, if some can not be connected, it is not compatible with this unit).
- Use the USB dataline to connect the mobile with main unit, ① open the phone developer option interface and turn on USB debugging ② Scan the left QR code to download "AUDIO LINK".
- Please make sure that the main unit is connected the mobile with USB data line, sound input need to connect the bluetooth of the mobile, supporting bidirectional control functions.



• After mirrorlink connection, operation below:



- a) Volume adjust.
- Exit to mirrorlink.
- c) Back to previous operation.
- d) Screen saver.
- e) Return to main screen.
- f) Forced horizontal screen.

13. Wallpaper function

Press to wallpaper setting with 10 different wallpapers.

14. System setting

Press at to enter system setting.





Detail operation as below:

- a) Radio reception setting(can be adjusted to different countries).
- b) ABC Language setting, set preferred language.
- c) Rear camera NO/OFF
- d) Headlight NO/OFF

15. Audio setting

Press for audio setting.







- a) Press for adjusting 10 paragraph EQ and different sound effect performance (CLASSIC, ROCK, POP, JAZZ, ELECTRIC, CUSTOM).
- b) Speaker location adjustment.
- c) M loudness ON/OFF.

16. Display setting

Press for display setting.



- a) Press bt to select (standard, bright, soft, bright, custom).
- b) Press for customized color performance setting(brightness, contrast, hue, saturation, sharpness).

17. Bluetooth setting

Press for bluetooth setting.





Detail operation as below:

- a) Sometimes and Main unit Bluetooth name setting.
- b) Connected password setting.
- c) Automatically connected ON/OFF.
- d) Incoming calls answering automatically ON/OFF.
- e) Phone calls records download automatically ON/OFF.
- f) Phone book download automatically ON/OFF.
- g) Mill volume ON/OFF.

18. Date and time setting

 Press of for date and time setting (year/month/day/hour/minute) and time and date mode display.



- a) Press Properties for date mode display setting.
- b) Press of for time mode display setting.
- c) Press of for date and time adjusting.

19. Steering wheel control

Press for steering wheel button learning.





- a) Steering wheel.
- b) Steering wheel button learning (learning way: long press steering wheel button, click the learning button in main unit screen, after learning, click "√" to save it).

20. Multimedia image proportion setting.

 
• Press for multimedia image proportion setting with 4:3 and 16:9 wide screen.



21. Keypress light color setting

Press for keypress light setting.





- a) Press for backlight brightness adjustment, only available when the main screen has.
- b) Colorful lamp ON/OFF.
- c) Colorful lamp with seven colors keypress light.

22. Factory setting

Press for factory setting.



- a) Press *** to change the factory setting password.
- b) Press to factory setting(password: 123456). Setting it with different requirements, setting option is the same as system setting, after setting, save the memory.

23. System software version

• Press to check the system software version, different condition will have different version, the version in user manual is only for reference.

