


OWNER S' MANUAL

VDVD300R

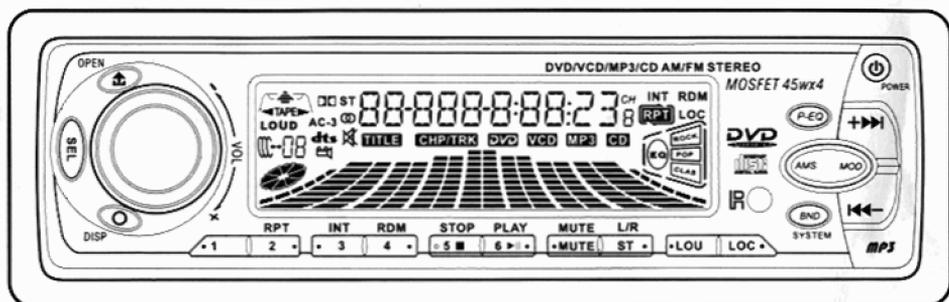

SOUNDSTREAM

CAR STEREO
FM/AM MULTI MEDIA PLAYER

DESIGN IN JAPAN

Welcome!

Thank you for purchasing our company multimedia player! To operate the unit correctly, please read the owner's manual carefully before using the unit. Keep these instructions and retain this booklet for future reference.

CONTENTS

Notes on Installation	3
Precautions	4
Wiring Diagram	5
Location of the Control	7
Basic Operation	8
Radio Operation	12
DVD Player Operation	13
Location of the Remote Control	16
Remote Control Operation	18
Installation	22
Specification	24
Simple Troubleshooting Guide	25

Notes on installation

- ☞ The unit is designed for **12V DC** , negative ground operation system only. Before installing the unit, make sure your vehicle is connected to **DC 12V** negative ground electrical system .
- ☞ The negative battery terminal must be disconnected before making Connections, which can reduce damaging the unit due to short circuit .
- ☞ Be sure to connect the color coded leads correctly according to the diagram. Incorrect connections may cause the unit malfunction or damage the vehicle' s electrical system .
- ☞ Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect the left and right channel speaker cables each other or to the vehicle body .
- ☞ Do not block vents or radiator panels. Blocking them will cause heat to build up inside and may result in fire .

- ☞ After the completion of the installation and begin to play the unit (including replacing the battery), please press the **RESET** button on the front panel with pointed objects (such as ball-point pen) to set the unit to initial status .

Precautions

- ☞ This unit can play the following discs only.

Type of disc	Label on the disc	Recorded material	Size of disc
DVD		Sound and moving Pictures	12cm/8cm
VCD		Sound and moving Pictures	12cm/8cm
MP3	MP3	Sound and moving Pictures	12cm/8cm
CD		Sound only	12cm/8cm

Note: ① The unit is compatible with DVD.VCD1.0/2.0/3.0 DVCD.CD-RW.CD-R.PICTURE-CD version Disc.
 ② The manual conforms to DVD、VCD、MP3 and CD. If no DVD、VCD or MP3 on some models.you should ignore them. While enjoying DVD、VCD、MP3 and CD, the display will automatically identify the discs and indicate the corresponding words.

Do not attempt to modify the unit, modifying the unit may cause an accident .

Stop the vehicle before carrying out any operation that could interfere with your driving .

Do not work in extreme high or low temperature inside the vehicle is between +60°C and -20°C before turning your unit on .

To enjoy optimum sound and images while playing , handle the discs as follows :

- Handle the disc by its edge to keep the disc clean , and do not touch the surface.




- Do not use your CDs with paste residue or ink attached .



- Do not use CDs with labels or stickers attached . which may leave a sticky residue while beginning to peel off. (Shown as picture)





- Clean the discs with an optional cleaning cloth .Wipe each disc from the center out. (Shown as picture)

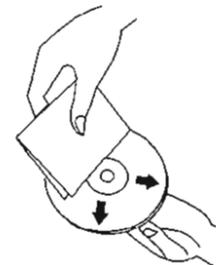

Wiring Diagram


STANDARD CONNECT

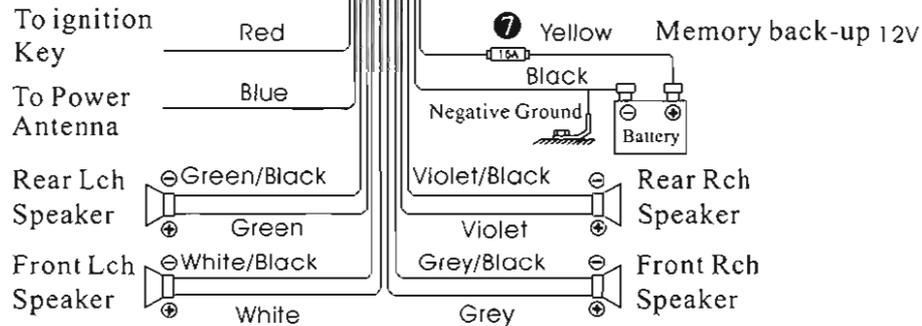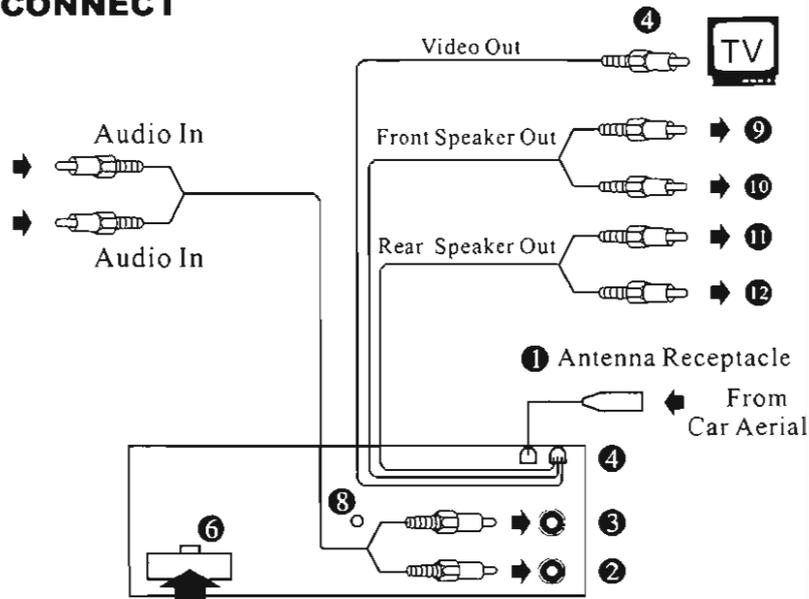


- ① Antenna Receptacle
- ② Audio In
- ③ Audio In
- ④ Video Receptacle
- ⑤ Output Socket(male)
- ⑥ Output Socket(female)
- ⑦ Fuse Holder (1.5A)
- ⑧ Screw Holes
- ⑨ Front Speaker Out (L)
- ⑩ Front Speaker Out (R)
- ⑪ Rear Speaker Out (L)
- ⑫ Rear Speaker Out (R)

Wiring Diagram

THE ESPECIAL CONNECT

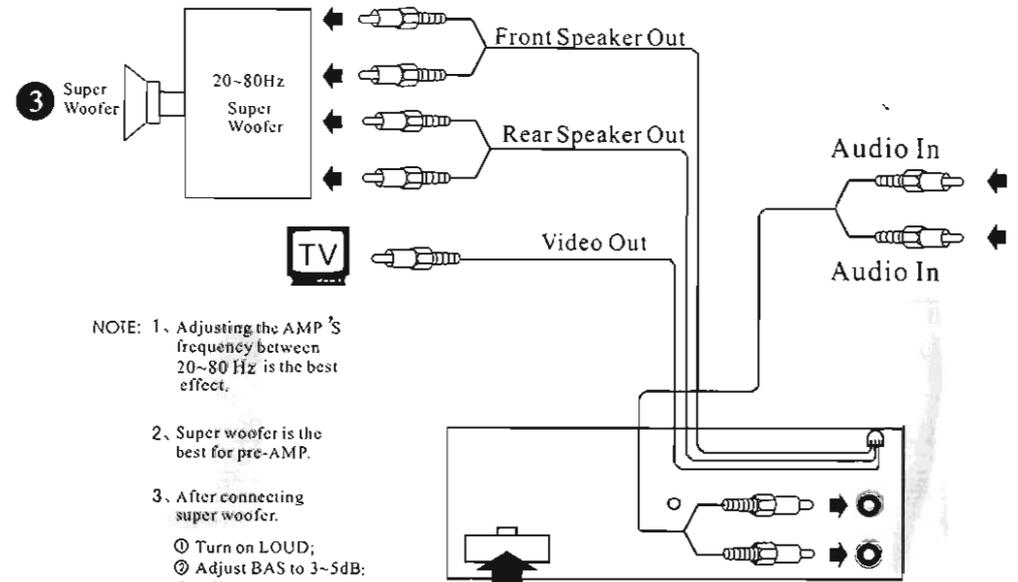

- NOTE: 1. Adjusting the AMP'S frequency between 20~80 Hz is the best effect.
2. Super woofer is the best for pre-AMP.
3. After connecting super woofer.
- ① Turn on LOUD;
 - ② Adjust BAS to 3~5dB;
 - ③ Adjust TRE to 5~7dB;

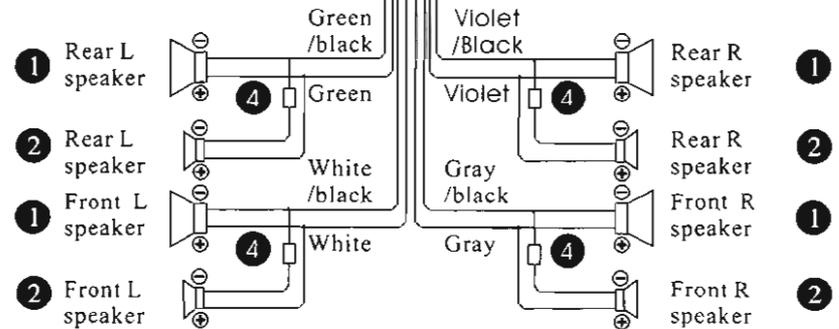


- ① 4Ω 40~60W speaker
- ② 4Ω tweeter
- ③ 12" super woofer
- ④ Match for tweeter

Basic Operation

XXXXXXXXXXXXXXXXXXXXXXXXXXXX


Turning Loudness On/Off

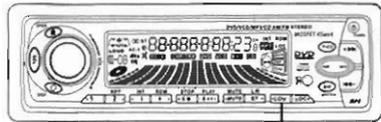

5


- Press **5** (LOU) button to increase the low frequency. This can improve the sensitivity for your ears. And "LOUD" appears in the LCD when the loudness mode is activated. (See the picture)

 Press it once more to shut down the LOU function.



XXXXXXXXXXXXXXXXXXXXXXXXXXXX

Setting P-EQ

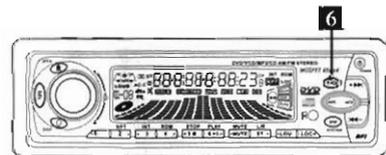


6

- While listening to the popular music, classic music and rock music, you can adjust the sound quality to make it perfect by pressing **6** (P-EQ) button. The procedure is as follows:


- ★ POP mode is selected when **6** (P-EQ) button is first pressed. and "POP" appears in the display. (Shown as picture)



 - ★ CLASSIC mode is selected when pressing **6** (P-EQ) button at the second time, and "CLAS" appears on the LCD. (Shown as picture)



 - ★ ROCK mode is selected when pressing **6** (P-EQ) button at the third time, and "ROCK" appears in the display. (Shown as picture)




- ★ Press **6** (P-EQ) button at the fourth time to turn off the P-EQ system.

★ Note : Bass mode and Treble mode return to initial settings when P-EQ system is on. "BASS" and "TREBLE" disappear.

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

Mute Function

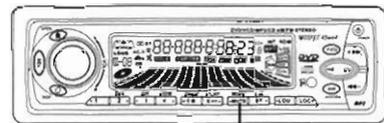

7


- Press **7** (MUT) button to cut down the sound output, "MUTE" and "M" appears in the LCD. (Press it again to revert to previous volume level).

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

Basic Operation

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

Displaying and Adjusting Time

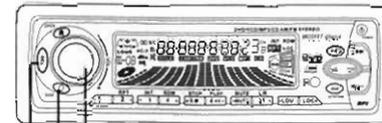

4 8 3


- Time Displaying:** Press **8** (DSP) button and the current time is displayed, and it returns to original status after 5 seconds or press the button again.

Time Adjusting: Press and hold **8** (DSP) button until the two points in the middle of the clock stop blinking, you can rotate **3** (VOL) knob to adjust hours and minutes.

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

Mode Selector

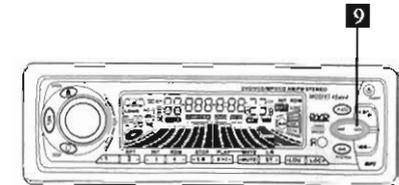

9

- Press **9** (MOD) button to select radio mode, playback mode or audio in mode.

XXXXXXXXXXXXXXXXXXXXXXXXXXXX

Sensor



10


- Receptor for the card remote commander. (for remote control version only)

★ Note: This window is used for the unit with remote control function. Without this function, you should ignore the operation contents about remote control function.


XXXXXXXXXXXXXXXXXXXXXXXXXXXX

Radio Operation

Band Selector

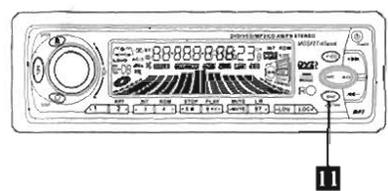


1. Press **11** (BAND) button repeatedly to select bands in the following order :

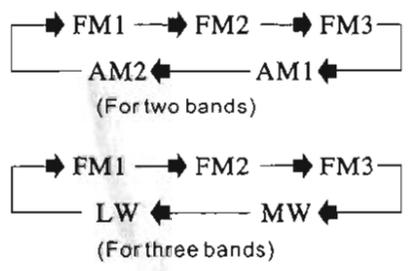

Note: On Playing Mode vision, press **11** (BAND) button to switch PAL or NISC system.

Manual/Automatic Tuning

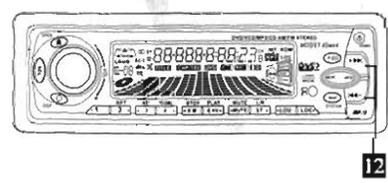


1. **Manual Tuning:** Press **12** (+) or (-) button continuously to select a station upward or downward respectively.


Automatic Tuning: Press and hold **12** (+) or (-) button for more than 3 seconds, the radio automatically searches a station

upward or downward respectively and plays when it finds a station.

LO/DX Selector

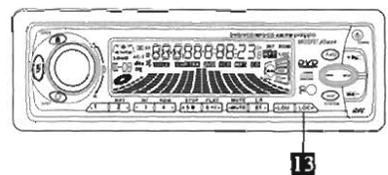

 3. Press **13** (LOC) button to select strong or weak station reception.
 ★ It is set to LOC mode when **13** (LOC) button is first pressed. "LOC" appears and only local station is available. (Shown as picture)




★ It is switched to DX mode when **13** (LOC) button is pressed again. Both distance and local stations can be received.

Note: ① The initial mode is DX mode. No "DX" appears in LCD.
 ② LOC is functional only in selecting stations.

Radio Operation


MO/ST Selector

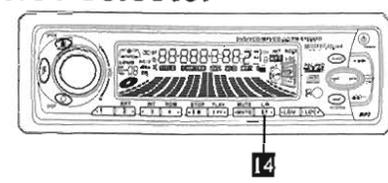


4. Press **14** (ST, L/R) button to select MONO mode or STEREO mode.

★ Stereo reception is charged when "ST" appears in the LCD. And "∞" appears in the display. (See the picture)
 ★ It is switched to MONO mode when "ST" disappears.
 ★ During the player mode, press the button to switch left speaker / right speaker / stereo.

Scanning/Memorizing Stations Automatically

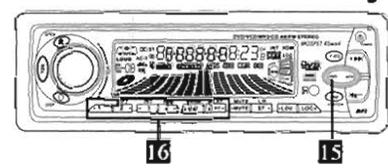

 
5. Press **15** (AMS) button to scan each stored station 10 seconds respectively which stored in **16** (1~6) number buttons. When AMS mode is carried out. "INT" appears on display. (See the picture). You also can press the corresponding number button or AMS button when your desired station is charged. It starts playing that station.



★ Press and hold **15** (AMS) button for more than 3 seconds to activate automatically memory storing function. The radio automatically selects a station and has it stored in any one of the number buttons **16** (1~6).

★ Note: The unit can be stored up to 6 stations for each band. Regarding the function of number buttons, refer to **16** number buttons for details.


Number Buttons

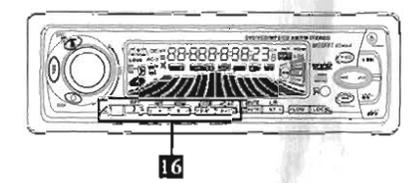

6. Number buttons can help you store your favorite station by pressing any one of the number buttons. You can follow the steps as below:

Press and hold any number button **16** (1~6) until "CH" appears in the LCD display when receiving a station. And now the station is already stored in the corresponding number button.

 
(See the picture)



You can store up to 18 FM stations, up to 12 AM stations.


★ Note: Working at 3 band for Europe, AM represents MW and LW.

 DVD、VCD、MP3、CD Operation



★ Note: RDM is not functional during playing DVD/MP3.

Stop Playing

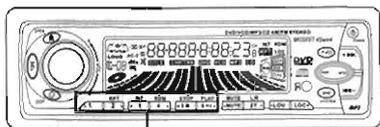


16

6. During playback, press **16** "STOP" button to stop the playback, LCD will show the elapsed time of the entire tracks on disc, "⏸" mark stops running. To return to normal play mode, press **6** button on **16**.

★ Note:

1. During DVD mode, press STOP **16** button only the first time, then stop playing, and "press play to continue" shows on TV, press STOP **16** again to stop.
2. During MP3 mode, press STOP **16** button one of the number button **16** to stop playing. LCD appears STOP.

Pause the Playback

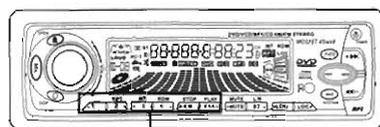


16

7. During playback, press **16** (PAUSE) button to suspend the playback, "⏸" mark stops running in the display. To return to normal play mode, press it again, and "⏸" mark runs accordingly.

★ Note:

1. You can also press **16** button to resume playback during stop playing mode.
2. Press **17** button not to eject disc during suspending mode, operate the function after canceling to suspend.

Eject a CDs

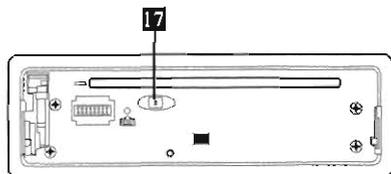


17

8. Press **17** Eject button (▲) to eject the disc, "OPEN" will appear on display.

★ Note : please use original disc for this product poor quality disc might damage the lens. If the product automatically locked. Press **9** (MOD) to change to radio mode and press the EJECT (▲) button for 3 seconds to eject the disc.

Location of the Remote Control

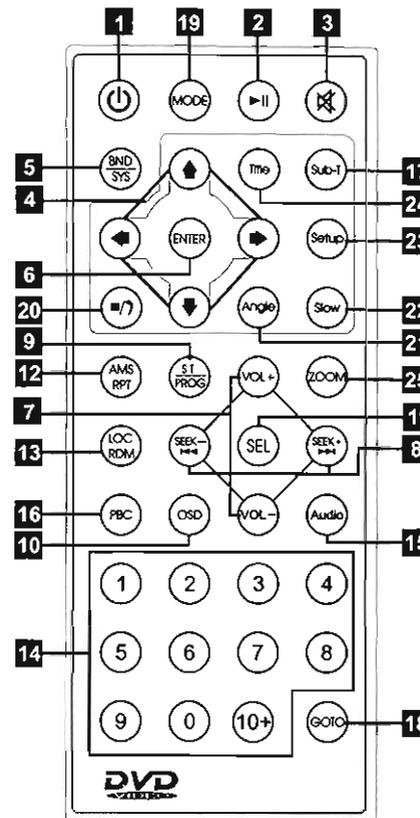


1 Power Switch	P17	13 Random Playing	P19
2 Pause/Play Button	P17	14 Number Button	P19
3 Mute Button	P17	15 Audio-Setting	P19
4 Selecting Menu Button	P17	16 PBC Menu	P19
5 Band/System Switch	P17	17 Subtitle-Setting	P19
6 Enter Button	P17	18 Playing Time-Setting	P20
7 Volume Control	P18	19 Mode Switch	P20
8 Tuning/Selecting Tracks/F.F/REW	P18	20 Stop/Reverse Button	P20
9 Program Playing	P18	21 Angle-Setting	P20
10 On-Screen Display	P18	22 Slow-motion Play	P20
11 Setting the Sound Characteristics	P18	23 Setup Menu	P21
12 Repeat Playing	P18	24 Menu-Display	P21
		25 Zoom-Setting	P21

Remote Control Operation


Replacing the Battery

★ When the range of the operation of the card remote control becomes short or no functions while operating. Replace the battery with a new button cell. Make sure the battery polarity before replace.


1. Pull out the Battery Holder while pressing the Stopper ①.

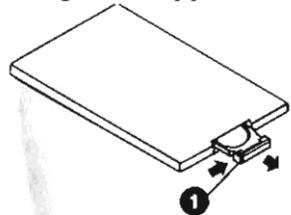

2. Put the button-type battery(+) mark upward into the Battery Holder.

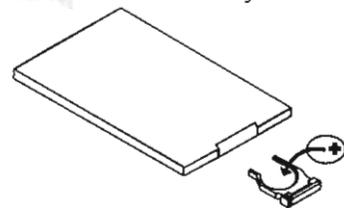

3. Insert the Battery Holder into the Remote Control.

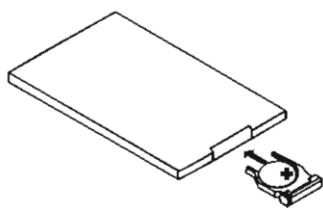

★ Note: Some models are not equipped with remote control, you should ignore the contents about remote control.

★ Power Button

— Press **1** (⏻) button to turn On/Off the power.

★ Pause/Play Button

— Press **2** (⏸) button to suspend the playback of CD, MP3, VCD, DVD. Press it again to return to normal playback mode.

★ Mute Button

— Press **3** (🔇) button to cut down the sound output, press it once more to resume the previous sound level.

★ Menu selector

— Press **4** (◀/▶/⏪/⏩) to select your desired menu, then press **6** (ENTER) or press the play button **2** (▶) to confirm.

Note: This function works in main menu mode only. refer to page 13.

★ Band/System Switch

— During radio mode, press **5** (BAND/SYS) to switch receiving band.
 — During the player mode, press **5** (BAND/SYS) button to switch to AUTO, PAL or NTSC system.

Remote Control Operation

★ Volume Increasing/Decreasing

— Press **7** (VOL+ or VOL-) button to increase or decrease the volume level respectively.

★ Tuning/Selecting Tracks /FastRewind/Forward

— During radio mode, continuously press **8** (◀ or ▶) button to manual search a station downward or upward respectively; if press and hold **8** (◀ or ▶) button for more than 3 seconds, the radio will automatically search a station downward or upward respectively until it finds a station.

— During the playing mode, press and hold **8** (◀ or ▶) button to fast rewind or fast forward for you to reach your desired track quickly. When discontinuously press **8** (◀ or ▶) button, you can select your desired portion downward or upward respectively.

★ Program Playing

— During CD, VCD mode, you can set the program order to play, you can follow the steps as below: Firstly press **16** (PBC) button, and then press **9** (PGM) button, and the television displays programming P00:00. You can set the program order to play them by using **14** (0 ~ 10+) button, and then press **2** (▶) to play.

Note: Program doesn't function in playing MP3.

★ On-Screen Display

— During CD, VCD, DVD mode, press **10** (OSD) button. The display shows single track elapsed time, single track left time or entire disc left time, and the track being played and the amount of the whole disc.

 
Note: During MP3 mode, only single track elapsed time is displayed in OSD mode.

★ VOL/BAS/TRE/BAL/FAD Selector

— Repeatedly press **11** (SEL) button to select the desired mode in the following order:



Note: After selecting your desired mode, you can adjust the current mode being displayed by using (VOL+ or VOL-) buttons. When P-EQ mode is activated, press SEL button to select the modes. And Bass/Treble mode are invalid. (shown as below)



★ Repeat Playing/AMS

— During DVD mode, firstly Press **12** (Ams/RPT) to repeat the current track being played; Press it again to repeat playing all the tracks. The third press it to cancel the repeating functional. (LCD will display different designs)

Remote Control Operation

— During CD、MP3、VCD mode, firstly press **12** (Ams/RPT) to repeat the current track being played; press it again to cancel the repeating functional.

Note: In VCD、MP3、CD mode. The initial procedure is repeat playing all the tracks.

*Note: In radio mode. Press **12** (Ams/RPT) to scan each stored station 10 seconds respectively which stored in **Number Buttons**.*

★ Random Playing

— During the playing mode, press **13** (RDM) button to play any track at random. (Viz. The unit plays tracks out of turn.)

Note: RDM is not functional in DVD mode.

★ Number Buttons

— During radio mode, you can select one of the 6 stored stations on each hand by pressing any one of the **number button 14**.

— During the playing mode, you can select any track directly by using **14 number button** (0~10+). For example, if you need the fifteenth track, you can first press button 10+ and then press button 5, the corresponding track (15)th will be played.

Note: When button 10+ is first pressed, it works as 10+, it works as 20+ when pressed at the second time, the third time ...30+...and the like.

In PBC playback mode. Number Button is not functional.

★ Left/Right/Stereo Selector

— During the playing mode, continuously press **15** (Audio) can change the sound to left/right speaker or stereo mode.

Note: There are 5 grades surrounding effect in surround mode. During VCD mode, you can see the different pictures indicating different effects on the television.

★ Playing PBC (menu)

— During VCD mode only, when pressing **16** (PBC) button at the first time, PBC playback starts and the **menu of entire disc** appears on the television. And then you can select your favorite track by using number button **14** (0~10+). When a track is playing, you can press **20** (STOP/RETURN) button to return to the menu if you want to stop to select other tracks. To cancel PBC playing, press **16** (PBC) button again.

★ Subtitle Selector

— During DVD mode, press **17** (SUB-T) button to switch the menu to Chinese or English.

Remote Control Operation

★ Setting CDs Playback Time

— In VCD、CD mode, press **18** (GOTO) key and set the time when you begin to play the track, and the television will display the time --:--. Enter your desired time by pressing number button **14** (0~10+). For example, enter: 25:00, it will automatically start playing the track from point of the twenty-fifth minutes in the disc.

— In DVD playing mode, press **18** (GOTO) key once and input a desired track number, then press **2** (▶||) key to play the DVD from the position corresponding to the track number selected.

— In DVD playing mode, press **18** (GOTO) key twice and input a desired time to play the DVD from the position corresponding to the time selected. For example, press **18** (GOTO) key twice and the television will display the time --:--. Enter your desired time by pressing number button **14** (0~10+). Then press **2** (▶||) button, it will automatically start playing the track from point of your desired time in the disc.

Note: No time play function for MP3.

★ Mode Switch

— Press **19** (MODE) button to switch to radio mode or playback mode.

★ Stop the Playback

— In DVD mode, press **20** (■/?) button to suspend the playback and “press play to continue” shown on TV, press it again to stop the playback.

Note: In VCD、MP3 and CD, press this key once to stop.

★ MULT-ANGLE KEY

— In DVD playing mode, press **21** (ANGLE) key, you can watch the DVD content from different angle.

Note: In VCD、MP3 and CD, it is not the function.

★ SLOW REVERSE/

SLOW ADVANCE KEY

— In DVD playing mode, press **22** (SLOW) key once for 2x slow advance, twice for 4x slow advance, third for 8x slow advance, fourthly for 2x slow reverse, fifthly for 4x slow reverse, sixth for 8x slow reverse, seventh for normal player. — In VCD playing mode, press **22** (SLOW) key once for 1x slow advance, twice for 2x slow advance, Third for 3x slow advance, press **2** (▶||) key to cancel slow reverse / Slow advance function.

Note: In MP3 and CD, it is not the function.
